
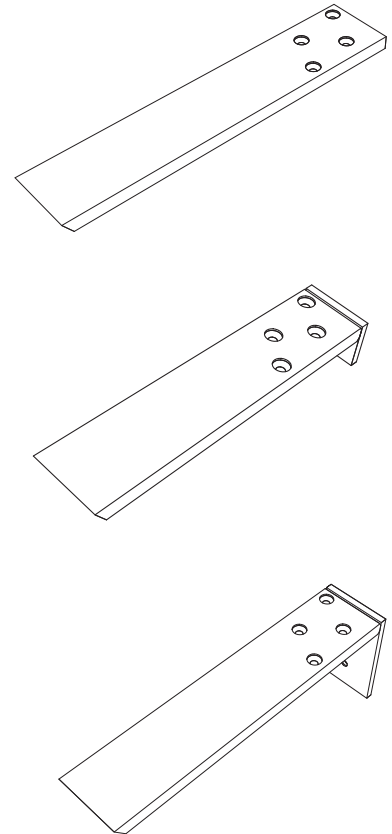


Installation Guide | Standard, Standard Plus, & Forward L Brackets

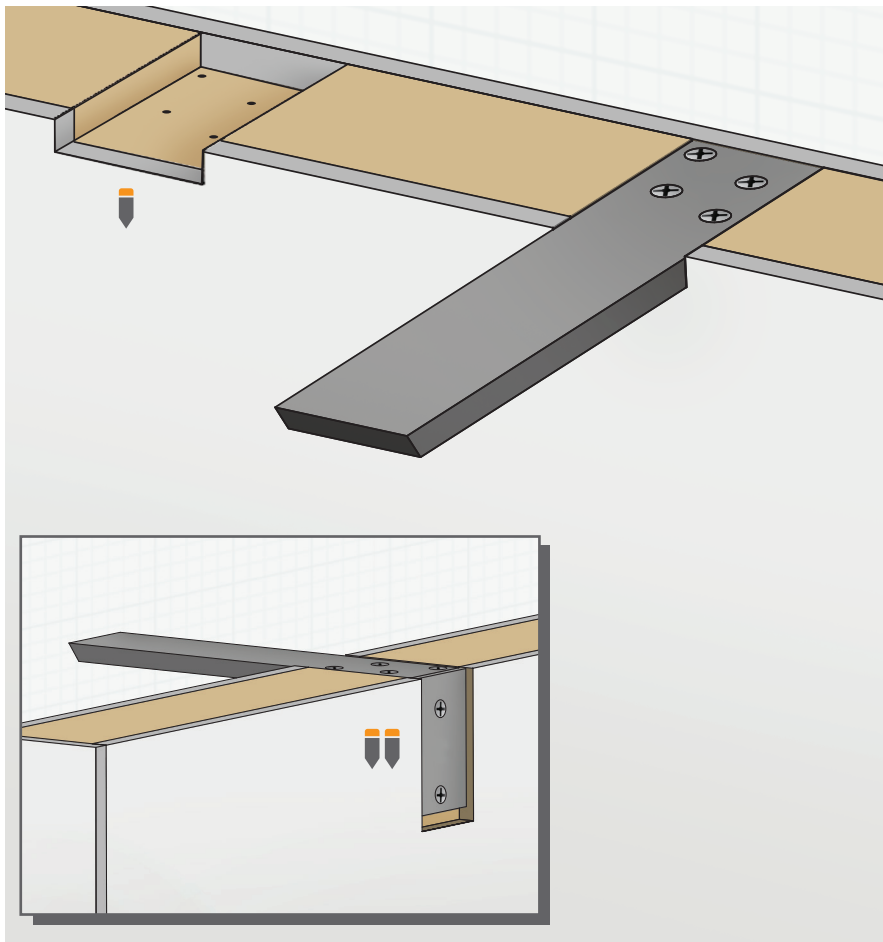

1. Measure and mark the appropriate mounting locations on the cap of your knee wall. Start at 6" inches in from the edges and space remaining brackets 18" – 24" apart.
 2. Create mounting channel for bracket:
 - A. **POWER TOOLS:** Use a Top Bearing Flush Trim router with a 1/2" deep cutting length and trim the excess wood out of the mounting surface.
 - B. **MANUAL TOOLS:** Use a hand saw and cut along each line to a depth of 1/2". Then using a wood chisel (1" is a good choice) remove the excess wood between the lines you just created.

Be sure to remove all the material in the mounting channel so you have a clean, level channel for the bracket to be seated in. If installing Standard Plus or Forward L brackets chamfer the back side to accommodate the weld bead.
 3. Place the bracket into the mounting channel and affix the bracket to the cap using **ALL** of the included #12 wood screws.
- HINT:** Pre-drill holes using a 9/64" bit. This will help ensure the wood doesn't split.
4. Use a level to ensure the brackets are level with the knee wall. If necessary, use shims to make the bracket level.
 5. Prior to setting the top in place, run a bead of high quality silicone adhesive down the center of each bracket.

ADDITIONAL STEP FOR STANDARD PLUS AND FORWARD L BRACKETS:

Screw the flange to the backside cap of the knee wall. The Forward L flange will screw into both the back side of the cap and the vertical stud.